

**This product may be purchased from Connevens Limited secure online store  
at [www.DeafEquipment.co.uk](http://www.DeafEquipment.co.uk)**



**DeafEquipment.co.uk**

Solutions to improve the quality of life



*sound*  *oasis*™  
**Sound Oasis Ultra II™**  
Model S-560-02



## Features

- 6 superior, digital nature sounds provide rich, true-to-life sound
- Revolutionary Sound Card technology – build your own library of sounds
- 30, 60, 90 minute timer with "gentle off"
- Plug-in or use with batteries – perfect for home, office or travel

Congratulations! You now own a top-quality Sound Oasis Ultra II™ Sound Conditioning System.

This product has been designed to provide years of satisfaction. To ensure that it functions properly, please read the following instructions before use.

Thank You!

## Contents:

 
Important Safeguards .....	3
Unit Features .....	4
Power Sources .....	5
Using Battery Power .....	5
Using AC Power .....	5
Setting the Clock & Alarm .....	6
Setting the Clock .....	6
Setting the Alarm .....	6
Turning the Alarm On & Selecting Wake-up Sounds .....	6
Setting Alarm Sounds .....	7
Turning the Alarm Off .....	7
Snooze Cycle .....	7
To Operate .....	8
Using Programmable Off/Resume Button .....	9
Placement of Unit .....	9
Using Headphones .....	10
Built in Sounds .....	10
Operating the Sound Card Feature .....	11

## Important Safeguards:


1. Read all instructions.
2. To protect against electrical shock, do not immerse cord, plug or unit in water or other liquid. Care should be taken so that objects do not fall on and liquids are not spilled through openings in the unit.
3. Unplug the power cord from the wall outlet when unit is left unused for a long period of time.
4. Do not operate with a damaged cord or plug, or after the unit malfunctions or has been damaged in any manner.
5. The unit should be situated away from heat sources such as direct sunlight, radiators, heat registers, stoves or other heat-producing appliances.
6. The unit should only be connected to the enclosed power supply or one described in these instructions, or as marked on the appliance.
7. To clean, gently wipe with a soft cloth moistened with warm water or mild detergents only, then remove all moisture with a soft, dry cloth. Do not use harsh solvents or chemicals for cleaning.

### Unit Features

### Front Face

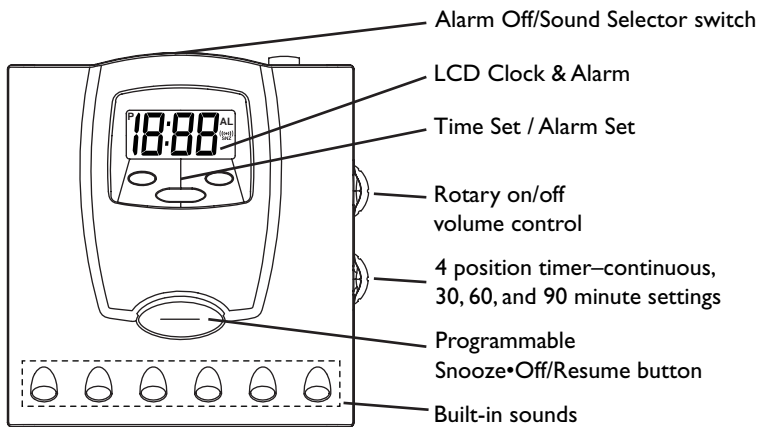

### Back Face

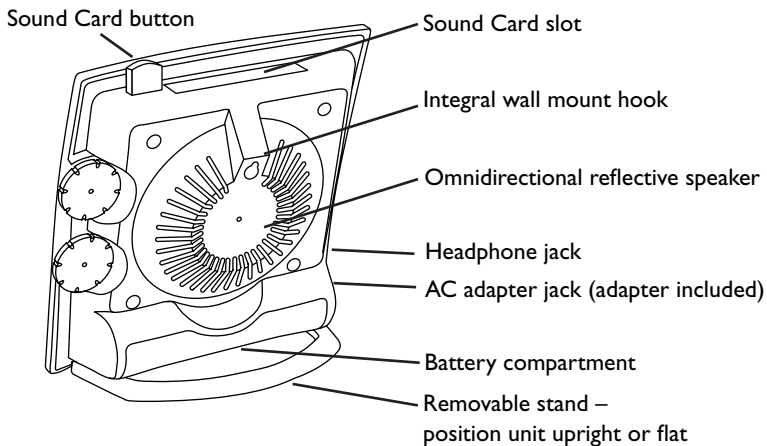 

## Power Sources:

Your Sound Oasis Ultra II™ unit can be powered by an **AC Adapter** (included) or by 4 “AA” batteries (not included).

### 1. Using Battery Power:

To install batteries, open the **Battery Compartment** located at the bottom of the unit. Insert 4 “AA” alkaline batteries in the direction marked by the indicators inside the **Battery Compartment**. Replace the **Battery Compartment Door**.

### 2. Using AC Power:

Connect the supplied **AC Adapter** to the **AC Adapter Jack** located on the side of the unit and plug the **AC Adapter** into a wall outlet. When plugged in, the unit will draw no power from any batteries that you may have installed in the unit’s **Battery Compartment**. If a power outage occurs, the unit will automatically switch over to battery power.

## Setting the Clock & Alarm:

### Setting the Clock:

To set the clock, slide the **Time Set/Alarm Set** switch on the front of the unit to the **Time Set** position. Press the **Hour** and **Minute** buttons until your desired time is shown on the **Clock Display**. A “P” in the upper left corner indicates **PM**. To exit the **Time Set** mode, move the **Time Set/Alarm Set** switch to the middle **On** position.

### Setting the Alarm:

To set the alarm, slide the **Time Set/Alarm Set** switch on the front of the unit to the **Alarm Set** position. An “AL” icon will be displayed to show you that you are in **Alarm Set** mode. Press the **Hour** and **Minute** buttons until your desired alarm time is shown on the **Clock Display**. To exit the **Alarm Set** mode, move the **Time Set/Alarm Set** switch to the middle “On” position.

### Turning the Alarm On & Selecting Wake-up Sounds:

To turn the alarm “On”, simply move the **Alarm Sound** selector switch (located on the top of the unit above the **Clock Display**) to **Buzzer** for a buzzer alarm, or to **Sounds** for a nature sound alarm (see *Setting Alarm Sounds* for more details). When the alarm is turned **On**, the **Alarm On Icon** (☞) will be visible on the right side of the **Clock Display**.

**Note:** To wake to a nature sound alarm, the unit’s **Rotary On/Off Volume Control** must be turned **ON**. If the **Rotary On/Off Volume Control** is turned **ON**, sound playback can still be stopped with the 30, 60, 90 minute timer function or the **Snooze•Off/Resume** button.

## Setting Alarm Sounds:

You can wake to a buzzer or any one of the six (6) built-in nature sounds. If you are using a **Sound Card**, you may also wake to any one of the six (6) **Sound Card** sounds (so long as the **Sound Card** button is in the **ON** position).

**Note:** *If you choose to wake to a nature sound, your unit will play whatever nature sound was last played.*

## Turning The Alarm Off:

The alarm can be turned off by:

1. Moving the **Alarm Sound** selector switch to the **Alarm Off** position. The **Alarm On Icon** (☹️) will disappear from the **Clock Display** to show that the alarm is **Off**.
2. Pressing the **Snooze•Off/Resume** button.  
(see *Snooze Cycle* for more details)

## Snooze Cycle:

When waking to either the buzzer or a nature sound, pressing the **Snooze•Off/Resume** button when the alarm sounds will turn off the alarm and start a four (4) minute snooze cycle (the **Alarm On Icon** (☹️) will flash signifying that you are in the snooze cycle). The snooze cycle will repeat (for a limitless number of cycles) every time the **Snooze•Off/Resume** button is pressed until the **Alarm Sound** selector switch is moved to the **Alarm Off** position.

**Note 1:** *If you wake to a nature sound alarm and the **Snooze•Off/Resume** button is **Not** pressed, the nature sound alarm will continue for whatever time duration is selected on the 4 Position Timer dial (30, 60, 90 minutes or continuous setting).*

**Note 2:** *If you awake to the buzzer sound and the **Snooze•Off/Resume** button is **NOT** pressed, the buzzer will sound for one (1) minute and then automatically turn off.*

### To Operate:

Follow these steps to use your Sound Oasis Ultra II™.

1. Install batteries into the **Battery Compartment** at the bottom of the unit or connect the **AC Adapter** to the unit.
2. Your Sound Oasis Ultra II™ unit includes a **Removable Stand**. To install the stand, hold the stand so the arrows point to the front of the unit. Then insert the stand's tabs into the recess holes located on the bottom of the case. Slide the stand in the direction of the arrows until both tabs "snap" into place.
3. Turn the unit on by rotating the **On/Off Volume Control Dial** to your desired volume. When first turned on, the unit will automatically play its factory sound setting – "**Ocean Surf**". To select a different sound, simply press one of the other sound buttons located at the front of the unit.
4. Select the length of time you want the sound to be played by rotating the **Timer Control Dial** to the desired setting. Four positions are available; Continuous (Cont.) for constant playback; "30" for 30 minutes, "60" for 60 minutes and "90" for 90 minutes. On the "30", "60" and "90" minute timer positions, the sound gradually fades away in the last 12 minutes before the unit turns itself off.
5. In addition to the timer feature, the unit may be turned off manually by turning the **On/Off Volume Control Dial** off or by pressing the programmable **Off/Resume** button once. (Described in more detail below.)

**Note:** After turning the unit off with the **On/Off Volume Control Dial**, wait at least 15 seconds before turning the unit on again. This will allow the units' computer controlled electronics to reset. If you do not wait at least 15 seconds, you may hear a mixture of sounds coming from the unit.

## Using The Programmable Snooze•Off/Resume Button:

The unique programmable **Snooze•Off/Resume Button** located at the front of the unit allows you to conveniently turn the unit off during sound playback or to repeat your last played sound sequence.

Pressing the programmable **Snooze•Off/Resume Button** button once during sound playback turns the sound off automatically without having to turn the unit off with the **On/Off Volume Control Dial**. Pressing the programmable **Snooze•Off/Resume Button** button a second time repeats your last played sound at the same volume and timer setting.

**Example:** If you are listening to the “**Ocean Surf**” sound at half volume on the 60 minute timer position, pressing the programmable **Snooze• Off/Resume Button** once will turn the unit off. Pressing it again will automatically repeat the entire sequence by automatically playing back the “**Ocean Surf**” sound at half volume for another full 60 minute period.

## Placement of Unit:

The design of Sound Oasis Ultra II™ allows the unit to be placed flat on its back, hung on a wall, or placed in an upright position to save table space. To place the unit on its back, remove the stand by simply pulling it away from the base of the unit in the opposite direction of the arrows. To mount the unit on a wall, hang the unit from a wall hook or nail using the integral wall mount. The unit will lie flush against the wall.

**Note:** *The **Removable Stand** allows you to conserve luggage space when traveling.*

### Using Headphones:

For listening to sounds in private, your Sound Oasis Ultra II™ unit includes a **Headphone Jack** (headphones not included). The headphone jack accepts a 1/8" (3.5mm) monaural or stereo plug, for monaural sound playback.

### Built-in Sounds:

Sound Oasis Ultra II™ incorporates 6 built-in sounds that have been digitized from actual sounds of nature by the world's leading recorder of nature – Solitudes. Choose from **Ocean Surf, Stream, Rain, White Noise, Summer Night** and **Wind**.

#### 1. **Ocean Surf:**

The ocean surf provides a calm rhythm that helps you drift off to sleep or creates a relaxing oceanside environment.

#### 2. **Stream:**

A rippling mountain stream helps you unwind and creates an excellent background sound for daily activities in the home or at the office.

#### 3. **Rain:**

A tranquil rainfall provides a peaceful setting for relaxation and sleep. The shower sound is particularly good at masking higher toned background noise.

#### 4. **White Noise:**

The steady flow of a cascading waterfall is perfect as a “natural white noise” for masking unwanted background sounds.

#### 5. **Summer Night:**

Tree frogs take you to a Pacific forest for a placid summer's night of relaxation or contemplation.

#### 6. **Wind:**

Dramatic, but calming, gusts of wind sweep you away to a wilderness retreat.

## Operating The Sound Card Feature:

You can conveniently add 6 additional sounds to your Sound Oasis Ultra II™ with our unique Sound Oasis™ Sound Cards (available separately). Follow these step to use the **Sound Cards**.

1. Insert a **Sound Card** into the Sound Oasis Ultra II™ **Sound Card Slot** with the indicator arrow on the **Sound Card** pointing into the slot and facing the front of your Sound Oasis Ultra II™.
2. Push the **Sound Card** down until you feel the **Sound Card** meet the bottom of the slot (about 1/2" of the **Sound Card** will remain outside the slot).
3. To activate the **Sound Card** function, press the **Sound Card Button** located next to the **Sound Card Slot**. The **Sound Card Button** will pop-up to indicate that the **Sound Card** is activated.
4. To play back the sounds stored on the **Sound Card**, turn your unit on (if not on already), and press the sound button next to the number that corresponds to the sound number you want to listen to from the **Sound Card**.



**Example:** If "**Ocean Rain**" is the 5th **Sound Card** sound, pressing the sound button with a "5" next to it will play the "**Ocean Rain**" sound.

## Sound Oasis Ultra II™

5. To deactivate the **Sound Card** function, press the **Sound Card Button** down. You may then listen to the sounds built into your Sound Oasis Ultra II™ in the normal manner.

### Caution:

- Do not touch the metal contact on the **Sound Card**. Touching these electrical contacts with statically charged objects, including your fingers, could erase the sounds stored in the **Sound Card**.
- If you remove the **Sound Card** from your Sound Oasis Ultra II™ system, store the card inside its carton to protect the card's electrical contacts from dust and debris.
- Do not place excessive pressure on the **Sound Cards**.
- Do not expose **Sound Cards** to heat, cold or liquids.

### FCC Notice

This equipment complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. Operation is subject to the following 2 conditions:

- (1) This device may not cause harmful interference; and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Nature sounds used under license from Solitudes® Ltd.  
© 1995 Solitudes Ltd.

For a free catalog of their nature programs write to :

1131A - Leslie Street, Suite 401, Toronto, ON, Canada M3C 3L8  
Copyright© 1979

Artwork# S-560-02-01