

**This product may be purchased from Connevens Limited secure online store
at www.DeafEquipment.co.uk**



DeafEquipment.co.uk

Solutions to improve the quality of life





PowerTel 501 - Additional Handset Quick Start Guide

Please note that full instructions are included in the PowerTel 501 user guide booklet. The English section can be found on page 25, with pictures of the different phone bases so that you can easily check which existing product you have, on page 32.

Follow the steps below to connect your new additional PowerTel handset quickly and easily.

Connecting and charging your handset

1. Plug the charger base into the mains power socket and switch on. Please make sure that:
 - the base is on a flat and stable surface
 - the mains power cable reaches the socket easily and is not a trip hazard
 - the base is at least 1 metre away from other electrical appliances to avoid interference
 - it is not in a damp or very humid place, such as a bathroom.

For safety reasons, **ONLY USE** the power adaptor plug supplied.





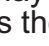 


2. Insert the 2 x AAA 1.2V 800 mAh NiMH rechargeable batteries supplied into the battery compartment. Take care to note the '+' and '-' markings and position the batteries the correct way around. Replace the battery cover, making sure it clicks shut.


ONLY USE the batteries supplied. Using incorrect batteries will irrecoverably damage your product and will invalidate your guarantee.


3. Place the handset in the charger base and leave to charge for a minimum of 15 hours before you attempt to register and use it.

Registering your handset

Note: The up \wedge and down \vee buttons referred to in this guide can be found on the large round button underneath the display. Press the top of the button to move up \wedge and the bottom of the button to move down \vee through the options on the screen.

1. Once your handset is fully charged, take it out of the base and the display will change to 'Not register'. You will also see the \rightarrow Menu icon in the bottom left of the display, just above the left hand Menu button .
2. Press the Menu button  once, the display will change to 'Ans machine'. Press the \vee button 3 times, until you see 'Handset' in the display.
3. Press the right hand button under the display with the  icon above it. 'Ring tone' will now be displayed. Press the \wedge button once, until you see 'Registration' in the display.
4. Press the right hand button  to select, 'Register' is now displayed. Press the right hand button  to select again and 'Base 1' will be displayed. Press the right hand button  to select again, 'PIN:' will be displayed.
5. Using the handset keypad, enter '0000' and press the right hand button  to confirm. Please note that when you enter each '0', it will appear in the display as '*'. 'Press & hold base Page key' is now displayed.

Note: The Page key on the base of your existing PowerTel product has the  symbol on it. Please refer to page 32 of the PowerTel 501 user guide booklet to find the location of this key on your product.



























6. Press and continue to hold down the Page key  until the handset beeps, this can take between 10 - 15 seconds.
7. Your handset is now successfully registered to the base and 'POWERTEL' and the number of the handset registered to the base is displayed, eg POWERTEL 2.

Hotline

If you are unable to register your additional handset, you can also contact hotline service, UK Telephone number 0844 800 6503 (cost via UK landline at time of going to print: 6p connection charge and 5p/min, thereafter, different charges may apply if calling from a mobile phone). Helpdesk hours are Monday to Friday, 9am to 5pm, excluding public and national holidays.

Icons in the handset display

Please find below a list of all the icons you may see in the handset display, together with their meaning, to help you to use your product.

Icon	Product	Description
	Cordless handset only	Menu. This can be found above the menu button  , underneath the left hand side of the display. All the features and settings for your product can be accessed via the menu.
		Phone book. This can be found above the phone book button  , underneath the right hand side of the display and is where you can store all your frequently dialled names and numbers for quicker and easier dialling.
	Cordless handset only	Make or confirm a selection or setting.
	Cordless handset only	Go back or return to the previous screen or information.
	Cordless handset only	Press to delete digits or letters when entering information
	Cordless handset only	Press to stop or cancel a deletion of information, such as a phone book entry.
	Cordless handset only	There are more digits to view on the left.
	Cordless handset only	There are more digits to view on the right.
	Cordless handset only	Battery status.
		The ringer is off and the handset will not ring if you receive an incoming call.
	Cordless handset only	The keylock is on and you will not be able to dial any digits.
		You are in handsfree mode and can speak to your caller without holding the handset. Useful if there are other people in the room who would like to join in on the call with you.
	Cordless handset only	A call is in progress.
	Telephone base only	
		The boost receiver volume is on.
	Cordless handset only	The handset microphone is muted and your caller will not be able to hear you.
	Telephone base only	
	Cordless handset only	You have new calls listed in your calls list.
	Telephone base only	
	Telephone base only	You have old calls (ones you have already viewed) in your calls list.
	Cordless handset only	When steady indicates that the handset is registered and is in range of the base. You can make and receive calls OK. When flashing indicates that the handset is not registered or is out of range of the base. Move closer to the base to be able to make and receive calls OK.
		An internal handset to handset call is in progress.
	Cordless handset only	The answering machine is switched on.
	Cordless handset only	The answering machine is switched off.