

**This product may be purchased from Connevens Limited secure online store  
at [www.DeafEquipment.co.uk](http://www.DeafEquipment.co.uk)**



**DeafEquipment.co.uk**

Solutions to improve the quality of life





Technical Specifications  
of all InfoLoop™ components. See Over

**contacta** ■

# Clipboard InfoLoop™

## SPRING CLIP AND ROLLER CLIP MODELS

### Description

Contacta Clipboard InfoLoop™ provides induction loop assistance for hearing aid users in combination with a clip for paper or pad and a firm, flat surface for ease of writing.

The single clipboard unit incorporates microphone, amplifier, induction loop aerial and rechargeable battery system.

The Power Supply Unit connects to any convenient mains outlet to re-charge the Clipboard InfoLoop™.



*The highly portable Clipboard InfoLoop™ features sophisticated electronic circuitry to ensure the best possible voice reproduction. Automatic standby mode conserves battery life*

### Applications

The innovative Contacta Clipboard InfoLoop™ extends the benefits of induction loop technology beyond the desk or counter. This hand-held unit may be used anywhere, inside or outside.

The electro-magnetic field extends to a maximum of 1.2m.

### Operation

Clipboard InfoLoop™ is powered by a rechargeable battery that provides up to 7 hours use when fully charged. An on/off switch and visual indicators denoting power on, signal strength and battery life are mounted on the front edge of the unit.

Full operating instructions are supplied with the unit.

### Supply

Clipboard InfoLoop™, supplied complete with Power Supply Unit, is available direct from Contacta Limited.

### Technical support

Contacta offers comprehensive technical support for all its systems, including:

- Advice via telephone helpline, fax or email
- On-site visit by a Contacta Field Service Engineer
- Detailed installation and service manuals supplied with every system

Customers have access to continuous help and support, technical or administrative, through the Contacta Helpline.

### Contacta Sales

Telephone **0845 3312072**

Email

[contactasales@contacta.co.uk](mailto:contactasales@contacta.co.uk)

### Contacta Helpline

Telephone **0845 3312092**

Email

[contactahelp@contacta.co.uk](mailto:contactahelp@contacta.co.uk)

[www.contacta.co.uk](http://www.contacta.co.uk)





## Component specifications

### CL-10 Clipboard InfoLoop™

Comprises robust clipboard unit and power supply unit.

## Clipboard InfoLoop™

- Incorporates microphone, amplifier, induction loop aerial and rechargeable battery system
- ON/OFF switch and two LED lights on front edge of unit
- One red LED adjacent to the On/Off switch to show power on condition
- The other LED flashes green when the unit is receiving speech or other sound whilst:
- Flashing red light indicates when the unit needs recharging
- This LED also gives a constant red light during recharging
- Includes clip to secure paper/pad. There are 2 clip options: roller clip or spring clip

### Physical Data

*Height* 30mm  
*Width* 230mm  
*Depth* 320mm  
*Weight* 1.0 kilo

### Electrical Data

*Battery life*  
 7 hrs (min.)  
*Microphone*  
 2-wire electret cardoid

### Connections

*Microphone*  
 3.5mm jack socket  
*Power*  
 2.1mm DC socket

### Controls

*Power on*  
 Rocker switch

## Power Supply Unit

- Connects to any convenient mains outlet

### Physical Data

*Height* 60mm  
*Width* 50.5mm  
*Depth* 46.5mm  
*Weight* 440 grams


### Electrical Data

*Output voltage*  
 12v DC (unregulated)

## Other Contacta InfoLoop™ systems

Contacta offers reliable and cost effective systems for all situations:

- **Mini InfoLoop™**  
 For counters, booths, desks and similar applications
- **Portable InfoLoop™**  
 Handy desktop unit for maximum flexibility
- **Maxi InfoLoop™**  
 A permanent system to suit any area, from rooms to auditoria

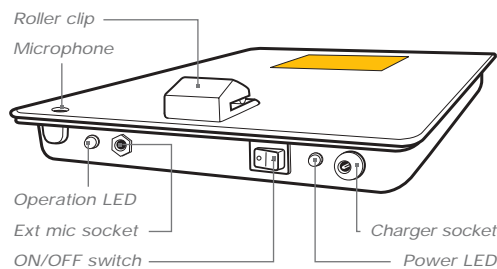

Contacta Limited  
 11 Tower View, Kings Hill  
 West Malling, Kent ME19 4UY  
 Telephone 01732 223900  
 Facsimile 01732 223909  
 Web [www.contacta.co.uk](http://www.contacta.co.uk)

